



WallStar★
DIGITAL
E A S Y

Peel & Up

SELF-ADHESIVE WALL DÉCOR MEDIA

Peel & Up makes decoration so quick and easy, even for a novice home decorator. No glue or special equipment needed. It's easy to reposition during installation and also easy to remove.

Quick, easy and clean installation

- ✔ Simply peel away and install
- ✔ Easy to reposition during installation
- ✔ Removable with no adhesive residue left on the wall

Creating new business opportunities

- ✔ 100% PVC-free media
- ✔ Superior printability with Dry Toner technology
- ✔ Ease of installation and removal encourages more frequent change of designs






Please follow the below installation guidelines to achieve the best results with your self-adhesive nonwoven wallcovering.

Note: Product is not suitable for heavily textured paints

ADVISORY

- Freshly painted walls should be left for 4 weeks before application, please refer to the paint manufacturer’s instructions for guidance.
- Ensure the wall is flat, clean, smooth and dry before application.
- Allow the wallcovering to acclimatize in the room it will be applied in for a minimum of 48 hours before application.
- Always test compatibility prior to use.
- For damaged walls: use a water-based primer/sealant prior to installation.

APPLICATION TOOLS

-  Plastic Smoother / Squeegee
-  Razor knife / Sharp Utility Knife
-  Spirit Level / Plumb Line
-  Straight Edge / Ruler
-  Pencil / Pen (to mark hang line)

SURFACE PREPARATION


1. Ensure wall is clean, free from dust, dirt, or grease.
2. If wiping with wet cloth, allow walls to dry before application.

FIRST PANEL INSTALLATION

1. Using a spirit level and a pencil, mark a vertical line equal to a panel’s width on the wall. Use this as a guide to hang the first panel as straight as possible.
2. Remove approx. 25 cm of backing paper and put the panel into the correct position on the wall.
3. Apply the adhesive to the wall with plenty of pressure.
4. Remove trapped pockets of air from behind with squeegee.
5. Ensure the edges are firmly sealed flat to the wall.
6. Remove a further 25cm of backing paper and apply to the wall.
7. Repeat the steps 2 to 6 until the panel has been completely applied.

STEP-BY-STEP GUIDE

1. Remove approx. 25cm of backing paper to expose the adhesive.
2. Line the edge of the nonwoven up with the edge of the first panel.
3. Apply pressure at the joint to fix it to the wall.
4. Moving from left to right apply pressure to the rest of the 25cm section, fixing it to the wall.
5. Remove a further 25cm of backing paper and apply pressure left to right, fixing this section to the wall.
6. Repeat this process until the full panel has been applied.

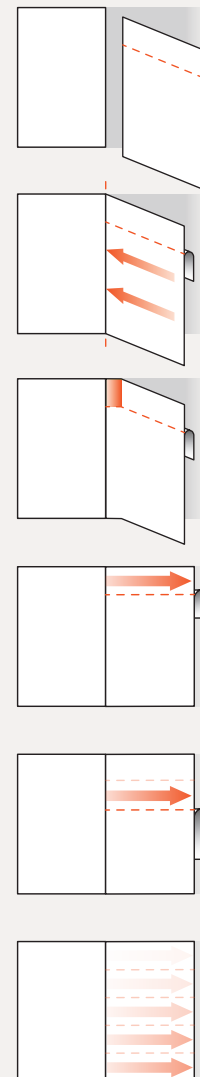

STAY IN TOUCH

Contact Ahlstrom Sales:

✉ digitalsubstrates@ahlstrom.com

www.ahlstrom.com

